



STREAM Asi2Ip

User's Guide

Introduction

Stream Labs Inc. appreciates your interest to our products and looks forward to fruitful cooperation.

This Users' Guide introduces description of main functionality of software named "Stream Asi2Ip".

Should you have any questions, comments or requests with regard to functionality of "Stream Asi2Ip" don't hesitate to contact us at your convenience. We appreciate your feedback.

ZAO "Stream Labs"

127273, Moscow, Berezovaya alleya, property 5A, bldg. 5

Phone: +7 (495) 739-82-42

Fax: + 7 (495) 739-82-42

E-mail: info@stream-labs.com

www.stream-labs.com

Product Description

“Stream Asi2Ip” is freely distributed software which is a part of installation containing drivers for capture and CG cards. Main application of this software is conversion of one or several ASI streams captured by Stream Labs’ video cards into IP stream. There is an option for work with several sub networks.

It is possible to run several instances of the program on the same PC in order convert several streams into IP.

Supported video cards

- Stream Labs WindSDI 2
- Stream Labs MS4
- Stream Labs MS4+
- Stream Labs MS2
- Stream Labs MSP


System requirements

1. PC with installed video card manufactured by Stream Labs.
2. Windows XP (32/64 bit), Windows 7 (32/64 bit).

Setup

After installation of driver icon «Stream Asi2Ip» will appear on a desktop.

Interface with settings, shown below, will pop up after start up of the program.

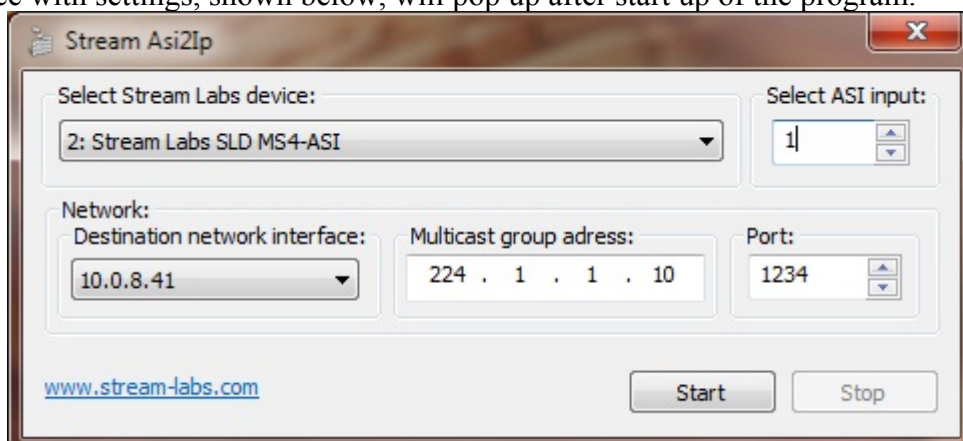

Local broadcast Asi2Ip to VLC player is shown on a picture below.

