



93 Dmitrovskoe Shosse, Bldg.1, Moscow, Russia | www.ipstreamlabs.ru | Tel/Fax: (495) 739-8242

USB-IO 24/4

**Discrete inputs / outputs cards with galvanic
isolation, universal power supply and Watchdog
User Manual**

2010

Ver. 1

Contents

1.	1. General Information.....	3
1.1.	Device application	3
1.2.	Key functions	3
1.3.	Specifications	3
1.4.	Package contents	3
1.5.	Operating conditions	4
1.6.	Precautions	4
2.	Equipment Installation	5
2.1.	Mounting the device	6
2.2.	Connecting cables	6
2.3.	Connectors	7
3.	Windows Driver Installation.....	Ошибка! Закладка не определена.
4.	Configuring The Device In Intellect Application (Version 4.7.6 And Above).....	Ошибка! Закладка не определена.
4.1.	Creating alarm inputs	Ошибка! Закладка не определена.
4.2.	Creating relay outputs	Ошибка! Закладка не определена.
5.	Manufacturer Warranty.....	Ошибка! Закладка не определена.

1. 1. General Information

1.1. Device application

USBIO discrete inputs / outputs cards (hereinafter device) are designed to enhance video surveillance systems, and to supply the required number of discrete inputs / outputs with galvanic isolation.

The device is equipped with:

- 62-pin DB connector for discrete inputs / outputs connection;
- A group of jumpers for assigning the discrete inputs condition;
- USB-port for connecting USB-devices;
- Connector for connecting to a computer motherboard;
- Watchdog for monitoring the system condition.

1.2. Key functions

- Tracking the discrete inputs condition;
- Changing the condition of discrete outputs;
- Tracking the status of your computer and restarting it in the case of hanging.

1.3. Specifications

Interface	USB 2.0 connection to a computer motherboard
Alarm contacts	24 inputs (normally closed or open)
Relay contacts	4 outputs
Power	through USB port
Size (Height x Width x Depth)	150 mm x 200 mm x 21 mm
Weight	90 g

1.4. Package contents

- USBIO device;
- Mating part for DB62 connector;
- DB62 connector housing;
- CD-ROM with drivers;
- Cable for connecting the device to a computer motherboard.

1.5. Operating conditions

1. Execute procedures and precautions described in this Manual.
2. Comply with requirements for connecting cables (See Equipment Installation section (page 5)).
3. Working temperatures may range from 0°C to +50°C (inclusively).
4. Relative air humidity – from 20% to 80% (without condensation).
5. Perform correct work completion (shutdown) of the device.
6. Other requirements are consistent with the general rules for operating household electronic appliances.

1.6. Precautions

1. Handle the device with care in order to avoid mechanical damages.
2. Avoid the device contact with foreign objects.
3. Do not expose the device to moisture.
4. Do not expose the device to direct sunlight.
5. Disconnect the computer power supply before connecting / disconnecting the device.
6. Protect the device from condensation. After transition from cold to warm environment, turn the device on not earlier than in 2 hours.
7. During transportation, use packaging which will adequately protect against possible damage.

2. Equipment Installation

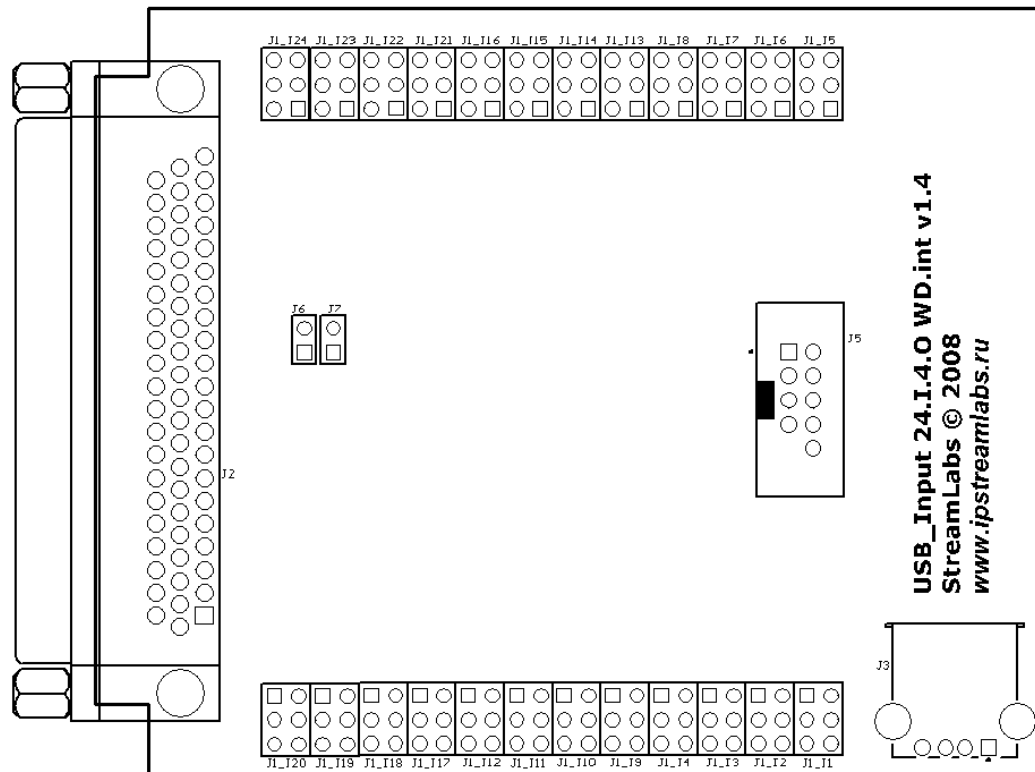


Figure 1. Connectors layout

Connectors:

1. **J1_lxx** – A group of contacts which assigns the power management for each discrete input (where xx - corresponds to the number of alarm input from 1 to 24);
2. **J2** – DB connector for connection of discrete inputs and outputs to the device;
3. **J3** – USB port for connection of USB devices (e.g., USB key);
4. **J5** – Terminal for connecting the device to the motherboard via cable;
5. **J6, J7** – computer restart block contacts (Watchdog).

2.1. Mounting the device

Mounting the device is performed in the following order:

1. Make sure that the computer where you're going to install the device is turned off.
2. Open the computer case and make sure that there is a free slot to install the device.
3. Make sure that there is a free connector for USB devices on the motherboard.
4. Insert the device into the free slot on the computer and affix it with a screw to the case.
5. Connect the cable to the J5 terminal on the device and to the free USB port on the computer motherboard.
6. If necessary, connect the wires from the computer RESET button to J6 contacts, and from J7 contacts to RESET contacts on the motherboard.
7. If necessary, connect USB device to J3 USB port.
8. Close the computer cover and turn it on for further installation of device drivers.

2.2. Connecting cables

Connect the device to your computer by using the USB cable that came with the device.




If the connection to the USB connector on the motherboard is not possible, use an AA type USB cable to connect the device to an external USB port. To do this, disconnect the USB cable from the device and close all the contacts on J5 terminal with jumpers. Connect the AA type USB-cable to J3 USB connector on the device and to the external USB port.

To connect the discrete inputs and outputs, use insulated wires.

2.3. Connectors

2.3.1. DB62 connector for connecting discrete inputs and outputs

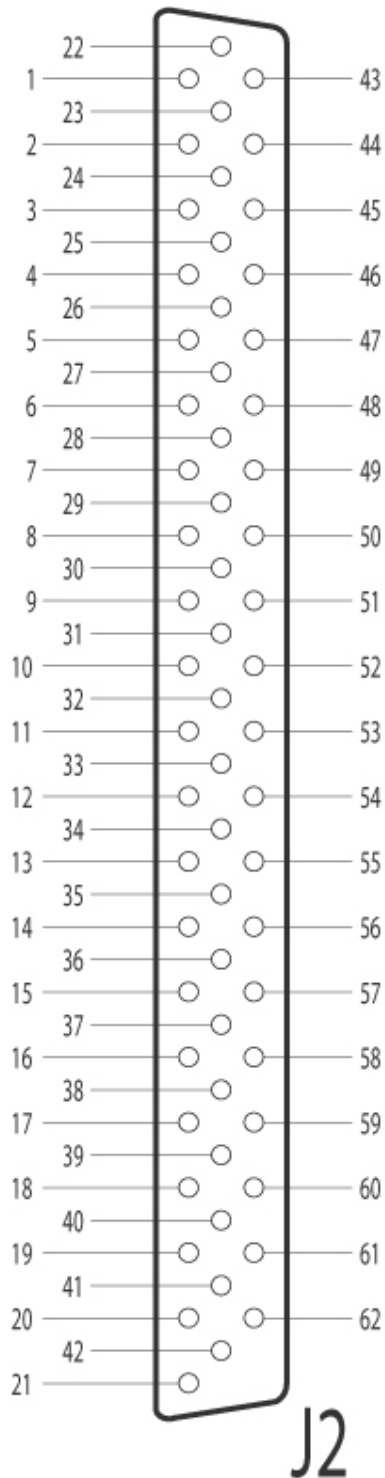

Contact	Assignment	Contact	Assignment
1	Input 1	32	Input 14
2	Input 1	33	Input 14
3	Input 2	34	Input 15
4	Input 2	35	Input 15
5	Input 3	36	Input 16
6	Input 3	37	Input 16
7	Input 4	38	Not used
8	Input 4	39	Not used
9	Input 5	40	Not used
10	Input 5	41	Output 3 (+)
11	Input 6	42	Output 3 (-)
12	Input 6	43	Input 17
13	Input 7	44	Input 17
14	Input 7	45	Input 18
15	Input 8	46	Input 18
16	Input 8	47	Input 19
17	Not used	48	Input 19
18	Output 1 (+)	49	Input 20
19	Output 1 (-)	50	Input 20
20	Output 2 (+)	51	Input 21
21	Output 2 (-)	52	Input 21
22	Input 9	53	Input 22
23	Input 9	54	Input 22
24	Input 10	55	Input 23
25	Input 10	56	Input 23
26	Input 11	57	Input 24
27	Input 11	58	Input 24
28	Input 12	59	Not used
29	Input 12	60	Not used
30	Input 13	61	Output 4 (+)
31	Input 13	62	Output 4 (-)


The connectors are located on the device front panel.

2.3.2. J1_lxx connector. Discrete inputs power management.

J1_lxx contact group consists of 24 pairs of three-row contacts. The “xx” value specifies the serial number of discrete input.


Set the parameters of the signals and select the operating modes for each discrete input.

Discrete input powered from the device power source

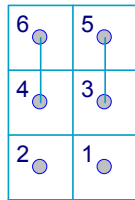

Discrete input powered from an external power source

(polarity of the external voltage is not important)

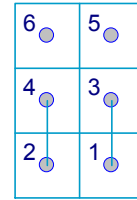

Attention! The numbering of the contacts begins from the center of the card, i.e., on the top connectors the pin numbers go from the bottom upwards (as shown in the picture above) and on the lower contacts – from the top downward.

Electrical parameters of the signals at the inputs and outputs.

Input parameters

- Galvanic isolation – **500 V**;
- Peak current – **10 mA**;
- External power source peak voltage – **24 V**.

Output parameters

- Output – open collector
- Peak voltage – **250 V**;
- Peak current – **150 mA**;
- Power dissipation rating – **150 mW**.